

SATELLAR AND WI-FI

SATELLAR can be remotely used over the Wi-Fi with web browsers of PCs, Laptops, Tablets, Smartphones etc.

This feature gives a lot of freedom and flexibility for configuration. The SATELLAR can be left to the cabinet, mast, etc.

HOW TO USE

Setup

1. Put the Wi-Fi module to SATELLAR's USB connector

Settings

1. SATELLAR
 - None
2. PC, Laptop, tablet, etc.:
 - Establish Wi-Fi connection with the SATELLAR (by searching new Wi-Fi connections etc.)

Using

1. Open the web browser of the PC, Laptop, tablet etc.
2. Connect to <http://192.168.0.242> (=SATELLAR)
3. USER NAME: satellar
4. PASSWORD: Sate123

Restrictions

1. SATELLAR drivers have been tested to support Wi-Fi modules having the following chipsets: ZyDAS ZD1211 or Ralink RT2070, RT3070.
2. Supported by FW 1.3235 or later.

